


Size pattern



220両肘

W2200 D920 H650 SH400

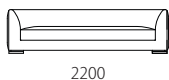



190両肘

W1900 D920 H650 SH400

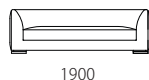



185片肘

W1850 D920 H650 SH400

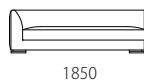



160片肘

W1600 D920 H650 SH400

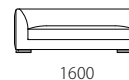

185カウチ

W1850 D920 H650 SH400

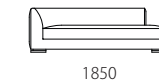



120AL

W1200 D920 H650 SH400



120ベンチ

W1200 D920 H650 SH400

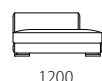

92オットマン

W920 D920 H400




62オットマン

W920 D620 H400




Combination pattern


120右ベンチ+185左カウチ

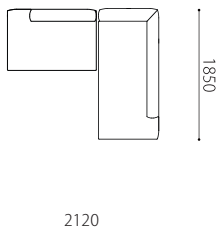


185左片肘+160左片肘

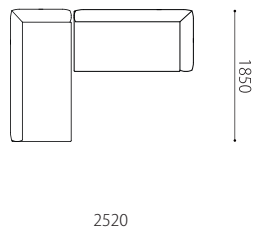


220両肘+120AL

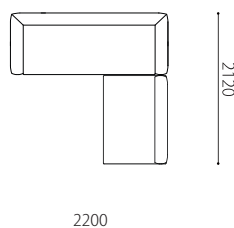

190両肘+62オットマン

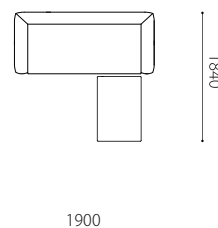

160右片肘+62オットマン

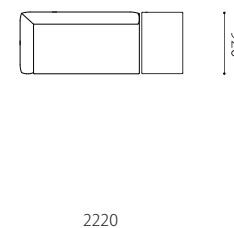

160左片肘+120AL+
92オットマン+120右ベンチ

